OSS212F-D5 Quick Guide

Version 1.10 - 2017.10.23



Thank you for your purchase of EchoStreams OSS212F-D5 Storage Server System!

1. Check the Content of the box. Please confirm that your package contains the following:


#	Description	Image / Description	Qty
1	OSS212F-D5	7.0	1
	Enclosure		
2	Motherboard	Tyan S7106GM2NR	1
3	CPU and memory	Intel Skylake and DDR4	Opt.
4	IO Cards		Opt.
5	Heatsink		2
6	2x 2.5" Drive Bay		Opt.
7	Slide Rail Kit + Screws		1 set
8	Power Cable*		2
9	Serial Cable*		1

^{*} Inside the accessories box. Box may consist of screw sets for rail kit or drives. If any items are missing, please contact your reseller or sales rep.


2. Get Familiar with the Unit.

OSS212F-D5 is a storage server supporting dual Intel processor and front tray-less 12x 3.5" HDDs, an optional rear 2x 2.5" OS drive and 7x low profile PCle slots in a 2U space. Tyan S7106GM2NR and internal cabling are preinstalled. Other motherboard model, IO cards, CPU, and memory can be preinstalled upon request.


Front view of the unit

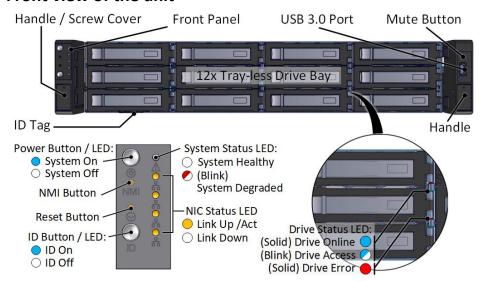

Rear view of the unit

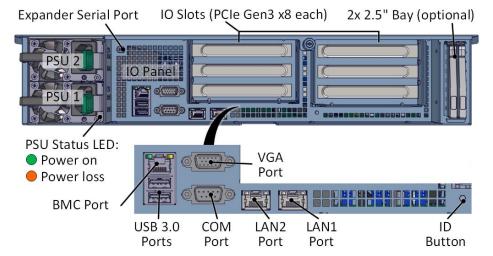


3. Remove the Top Covers of the unit as follows:

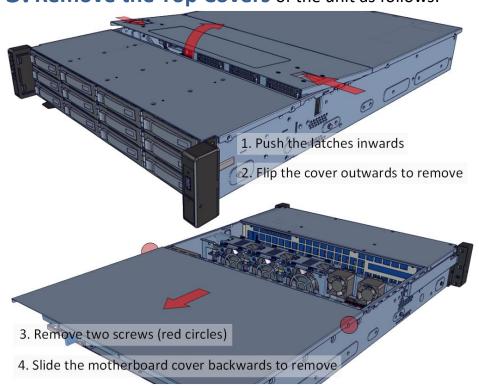

Remove the middle cover to get access to internal fans. The rear cover is for motherboard access.


4. Inspect the Inside of the unit. Internal components comprise of a Tyan motherboard, an expander board (to IO cards), an optional rear 2x 2.5" bay, 3x system fan modules and 2x IO card fan modules (all connected to the motherboard).

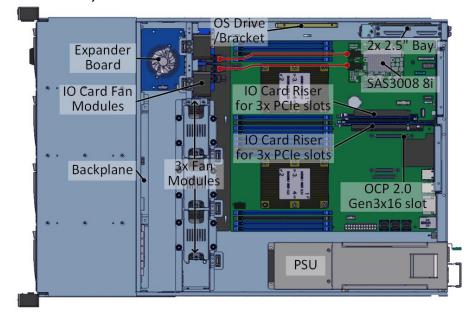

Install IO cards and OS disks as described below:




- 1. Remove the riser card assembly from the enclosure
- 2. Open the mylar top cover

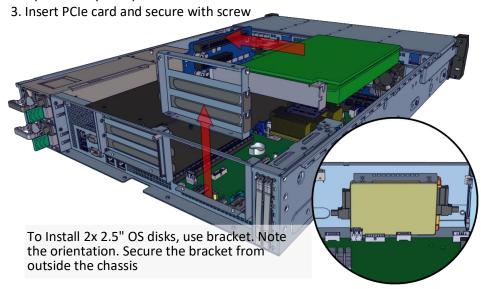


5. Install Motherboard Components. For details,

refer to the motherboard user's guide.

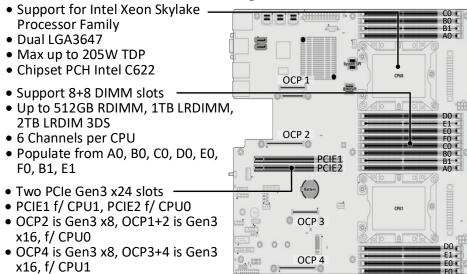


6. Remove the Inner Rail from the slide rail.

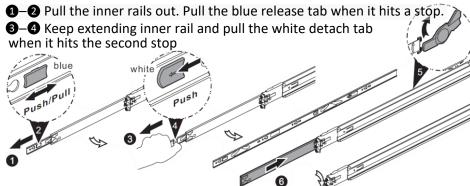


5–6 Unretract the mid rail by pulling the latch on the mid rail


7. Install Inner Rails to the enclosure.

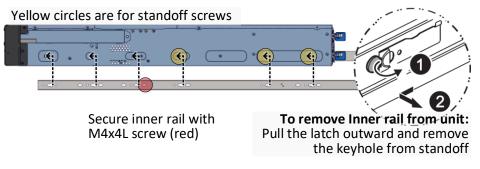


8. Install the Outer Rails to the Rack as follows:

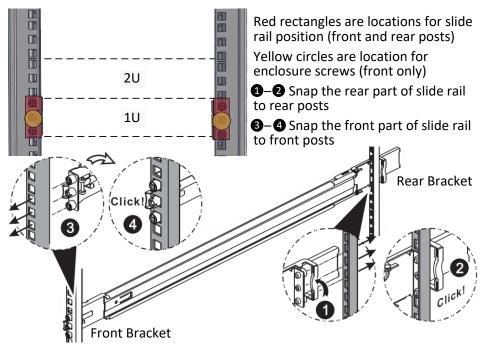

 To remove slide rails, use the latches to undo the assembly as follows:



9. Install the Unit to the Rack as follows:

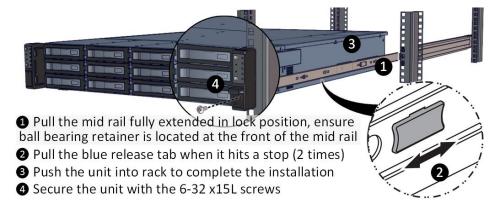


For a complete instruction on how to install unit to the rack, please follow the Slide Rail Installation Guide.



At least two people are recommended for mounting process.

10. Install 2.5" Drives to the enclosure as illustrated:

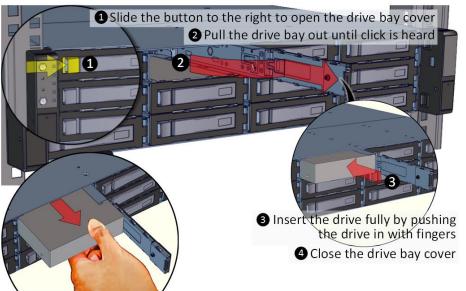

To remove the disk, open the drive bay cover, pull the handle out so that drive slightly slides out, and pull out the drive with hand.



11. Drive Mapping of OSS212F-D5 is as follows:



 
12. Plug in the Power Cords to the AC receptacles on the back of the unit.



13. Press the Power Button on the front of the unit and for the system to boot up.



14. Access the Serial Console (when necessary) by connecting a serial audio cable to the one of the console ports. Use a terminal console with baud set 115200, 8, N, 1, N. Type "help –a" for a list of commands.



For management through Eth port, refer to the User's Guide.