

OSS224-D5 Quick Guide Version 1.10 – 2017.10.23



Thank you for your purchase of EchoStreams OSS224-D5 Storage Server System!

1. Check the Content of the box. Please confirm that your package contains the following:

#	Description	Image / Description	Qty
1	OSS224S Enclosure		1
2	Motherboard	Tyan S7100GM2NR	1
3	CPU and memory	Intel Skylake and DDR4	Opt.
4	IO Cards		Opt.
5	Heatsink		2
6	2x 2.5" Drive Bay		Opt.
7	Slide Rail Kit + Screws		1 set
8	Power Cable*		2
9	Serial Cable*		1

* Inside the accessories box. Box may consist of screw sets for rail kit or drives. If any items are missing, please contact your reseller or sales rep.

2. Get Familiar with the Unit.

OSS224-D5 is a storage server supporting dual Intel processor and front tray-less 24x 2.5" HDDs, an optional rear 2x 2.5" OS drive in a 2U space. Tyan S7100GM2NR and internal cabling are preinstalled. Other motherboard model, IO cards, CPU, and memory can be preinstalled upon request.

Front view of the unit

Rear view of the unit



3. Remove the Top Covers of the unit as follows:



Remove the middle cover to get access to internal fans. The rear cover is for motherboard access.

4. Inspect the Inside of the unit. Internal components comprise of a Tyan motherboard, an expander board, an optional rear 2x 2.5" bay, 3x motherboard fan modules and 2x IO card fan modules (all connected to the motherboard).



See two options below to install OS disks.

Secure disk(s) with four M5 screws from the outside of chassis

2x 2.5" Bay (optional)







Installation and service of this product should be conducted by a trained personnel to avoid bodily injury from electric shock or heavy object



Observe ESD (Electrostatic Discharge) practices during integration to avoid possible damage to the board and / or other components



5. Install Motherboard Components (CPU,

heatsink, memory) using the guidelines below. For further details, refer to the motherboard TPS.

• Support Intel Xeon Skylake Processor Family 2x LGA3647 Sockets • Max up to 205W TDP Intel C621 PCH Chipset • 6+6 DDR4 RDIMM/LRDIMM 2666 • Up to 384GB RDIMM / 768GB LRDIMM / 1536GB RDIMM 3DS • 6 Channels per CPU, 1.2V PCIE6 • Populate from A0 \rightarrow F0 PCIE4 • PCIE1, PCE3 (Gen3x16), PCIE2 (Gen3x8) f/ CPU0 PCIE2 • PCIE5, PCE7 (Gen3x16), PCIE4, PCIE1 PCIE6 (Gen3x8) f/ CPU1

6. Remove the Inner Rail from the slide rail.

1-2 Pull the inner rails out. Pull the blue release tab when it hits a stop. **3**–**4** Keep extending inner rail and pull the white detach tab when it hits the second stop



5–**6** Unretract the mid rail by pulling the latch on the mid rail

7. Install Inner Rails to the enclosure.



8. Install the Outer Rails to the Rack as follows:





9. Install the Unit to the Rack as follows:



For a complete instruction on how to install unit to the rack, please follow the Slide Rail Installation Guide.



-

=

At least two people are recommended for mounting process.

10. Install 2.5" Drives to the enclosure as illustrated:



11. Plug in the Power Cords to the AC

receptacles on the back of the unit.



Press the Power Button on

To remove slide rails, use the latches to undo the assembly as follows:



For more information please visit our website at www.echostreams.com Copyright © 2017, Echostreams Innovative Solutions LLC. All rights reserved.

front of the unit and for the system to boot up.





13. Access the Serial Console (when necessary) by

connecting a serial audio cable to the one of the console ports. Pull out the drawer for serial port access. See picture for detail. Use a terminal console with baud set 115200, 8, N, 1, N.

Type "help –a" for a list of commands.



For more information please visit our website at <u>www.echostreams.com</u> Copyright © 2017, Echostreams Innovative Solutions LLC. All rights reserved.